



# CALCUTTA 100 USA

### CT100

| PART #  | DESCRIPTION                 | PART #  | DESCRIPTION                   | PART #  | DESCRIPTION               |
|---------|-----------------------------|---------|-------------------------------|---------|---------------------------|
| BNT0011 | Right Side Plate Screw      | BNT1234 | Level Wind Guide              | BNT1426 | Drive Shaft               |
| BNT0015 | Drag Spring Washer          | BNT1237 | Worm Bearing (A) Ret. Screw   | BNT1427 | Pinion Gear               |
| BNT0032 | Bearing Retainer            | BNT1239 | Pawl Cap                      | BNT1428 | Yoke                      |
| BNT0036 | Left Side Plate Screw       | BNT1240 | Line Guide                    | BNT1429 | Clutch Cam Retainer       |
| BNT0042 | Line Guide Pawl             | BNT1241 | Level Wind Guard              | BNT1430 | Clutch Cam                |
| BNT0192 | Left Side Plate Screw       | BNT1247 | Clutch Bar Support            | BNT1431 | Retractor Spring          |
| BNT0194 | Ball Bearing                | BNT1289 | Star Drag Spacer              | BNT1432 | Clutch Plate              |
| BNT0351 | Yokde Spring                | BNT1296 | Handle Assembly               | BNT1433 | Idle Gear (B)             |
| BNT0425 | "E" Lock                    | BNT1298 | Rt. Side Plate Bolts Assembly | BNT1434 | Set Plate                 |
| BNT0609 | Clutch Cam Spring           | BNT1309 | Brake Collar (green)          | BNT1435 | Clutch Pawl Spacer        |
| BNT0664 | Spacer (B)                  | BNT1310 | Worm Shaft Assembly           | BNT1436 | Clutch Pawl               |
| BNT0686 | Idle Gear (B) Retainer      | BNT1317 | Brake Collar (red)            | BNT1437 | Clutch Pawl Spring        |
| BNT0799 | Friction Washer             | BNT1327 | Idle Gear                     | BNT1438 | Drive Shaft Bushing       |
| BNT0830 | Spacre (optional)           | BNT1337 | Clutch Bar Support Spacer     | BNT1439 | Spool Assembly            |
| BNT1201 | Retractor Spring Collar     | BNT1338 | Clutch Bar Guide (A)          | BNT1440 | Worm Bearing (A) Retainer |
| BNT1206 | Roller Clutch Inner Tube    | BNT1420 | Star Drag                     | BNT1441 | One-Piece Frame           |
| BNT1207 | Roller Clutch Bearing       | BNT1421 | Right Side Plate              | BNT1442 | Clutch Bar Guide (B)      |
| BNT1214 | Drag Washer (A)             | BNT1422 | Cast Control Cap Assembly     | BNT1443 | Quick-Fire II Clutch Bar  |
| BNT1218 | Idle Gear (A) Spacer        | BNT1423 | Key Washer                    | BNT1444 | Left Side Plate           |
| BNT1227 | Clutch Pawl Spring Retainer | BNT1424 | Drag Washer (C)               | BNT1447 | Drive Shaft               |
| BNT1230 | Drive Shaft Spacer          | BNT1425 | Drive Gear                    | BNT1448 | Anti-Reverse Ratchet      |